

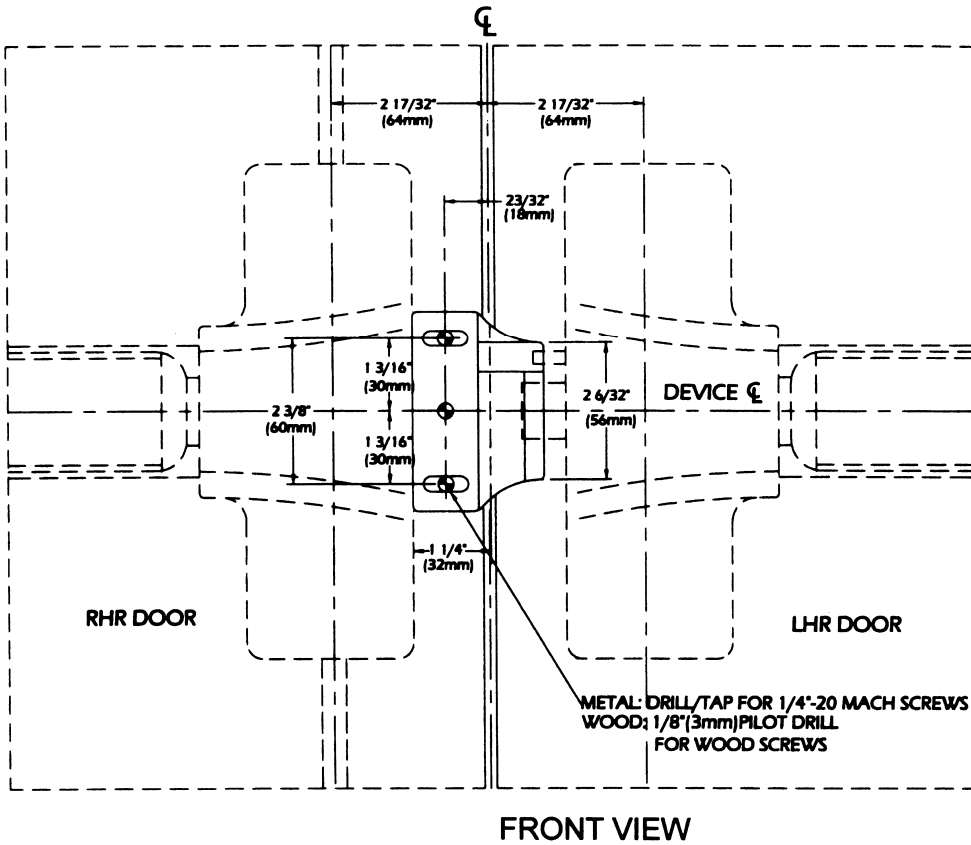


DOUBLE DOOR STRIKE INSTALLATION INSTRUCTIONS

(For Grade 1 Exit devices use)

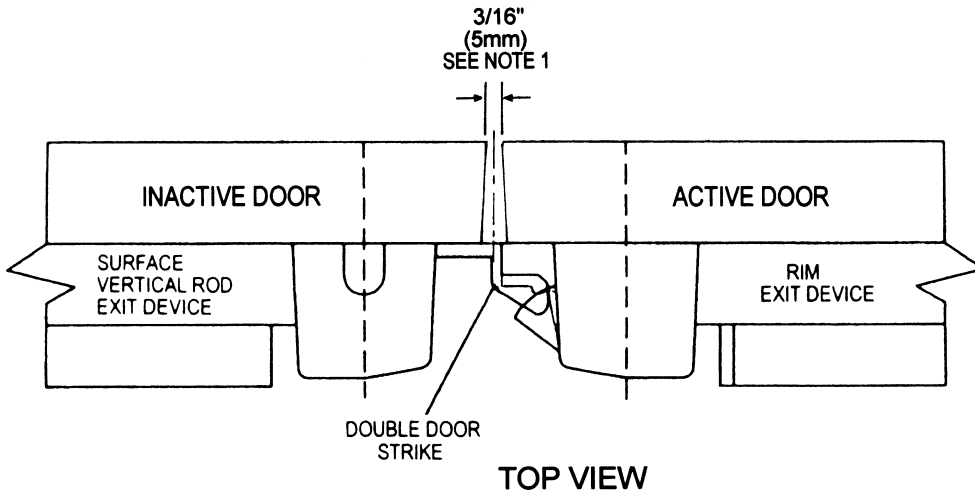

STRIKE DIMENSIONS

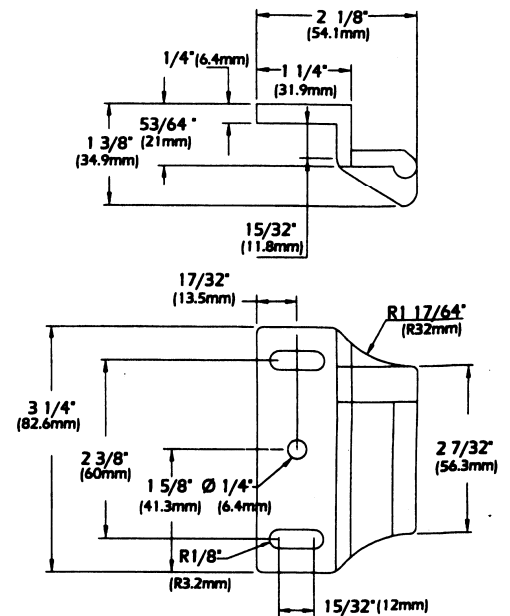

INSTRUCTIONS:

1. Install Surface Vertical Rod Exit Device on the inactive door and install Rim Exit Device on the active door first before installing this double door strike.
2. Use the horizontal centerline of the both exit devices and dimensions shown on this page to mark and drill holes.
3. Install double door strike with provided mounting screws.

NOTES:

- 1) Standard door gap is 3/16" (4.8mm) \pm 1/16" (1.6mm).
- 2) Use a coordinator on inactive door.