


PD9200V Series Service Manual

Templates

Preparation for SVR

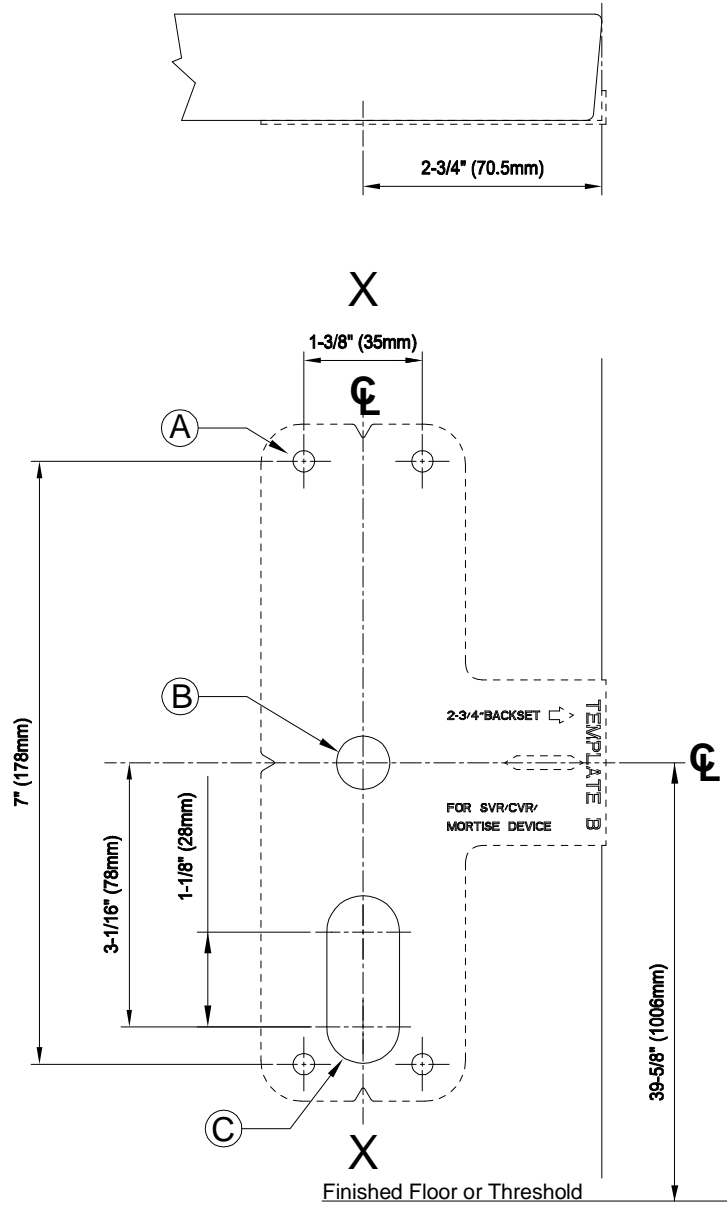


Notation	Illustration	Applications	Dimension	
			Metal	Wood
A	○	Exit Only	#25 Drill #10-24 Tap	1/8" (3mm) Drill Pilot 1" Deep
		Sex Bolt or Trim	1/4" (6mm) Drill (Device Side) 13/32" (10.3mm) Drill (Trim Side)	
B	○	Outside Cylinder	5/8" (16mm) Drill (Cut Device Side)	5/8" (16mm) Drill (Cut Thru)
C	⌋	Trim with Working Lever	7/8" (22mm) Drill (Cut Device Side Only)	

PD9200V Series Service Manual


Templates

Preparation of Top Latch for SVR/3PT

Top Latch & 106 Strike

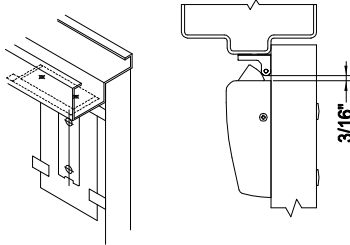

Top Latch & 108 Strike

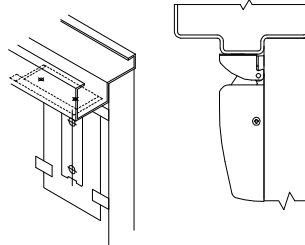

Top Latch & 215 Strike

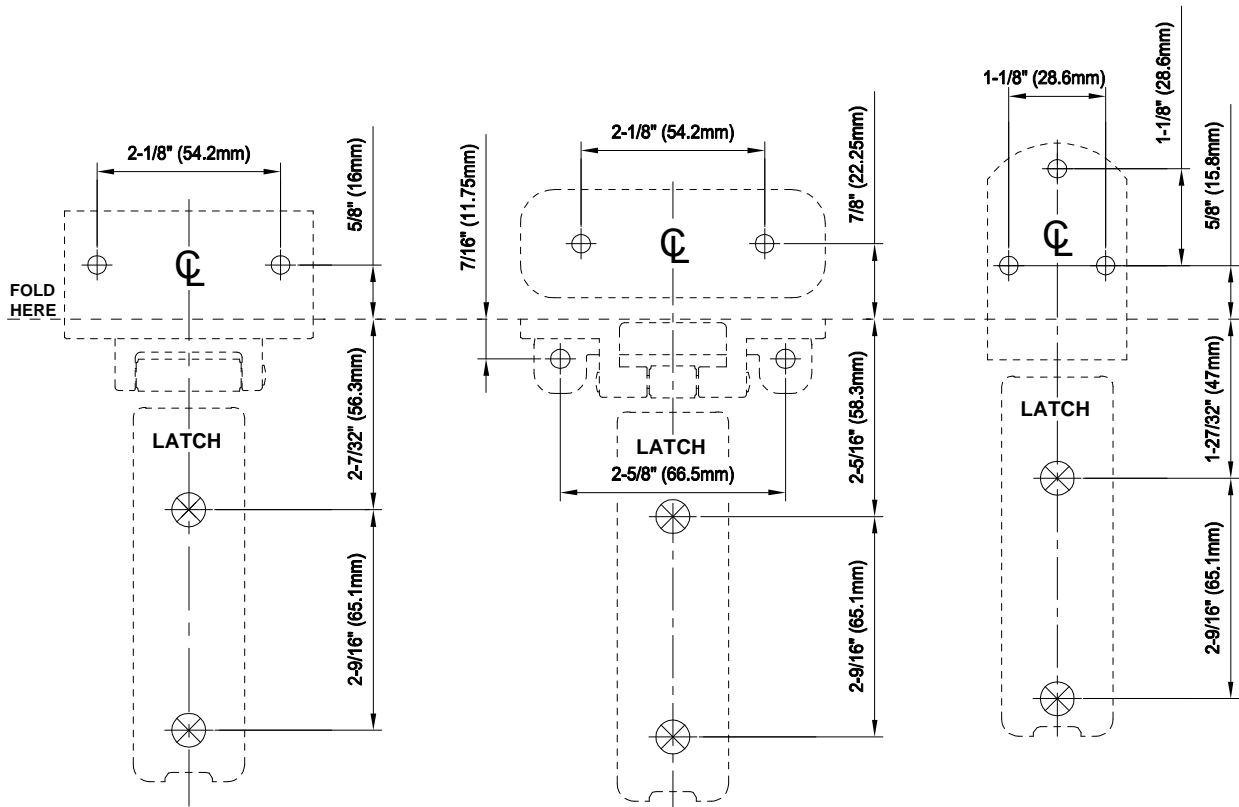
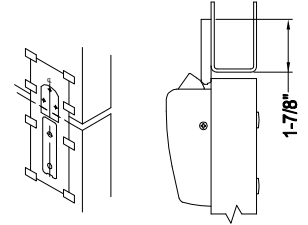



Illustration	Applications	Dimension	
		Metal	Wood
○	Strike Screw	#25 Drill #10-24 Tap	1/8" (3mm) Drill Pilot 1" Deep
⊗	Sex Bolt	5/16" (8mm) Drill (Device Side) 13/32" (10.3mm) Drill (Outside)	

PD9200V Series Service Manual

Templates

Preparation of Bottom Latch for SVR/3PT

Bottom Latch & 227 Strike

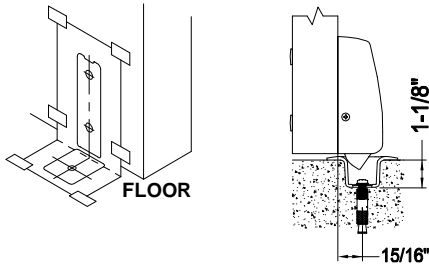

Bottom Latch & 224 Strike

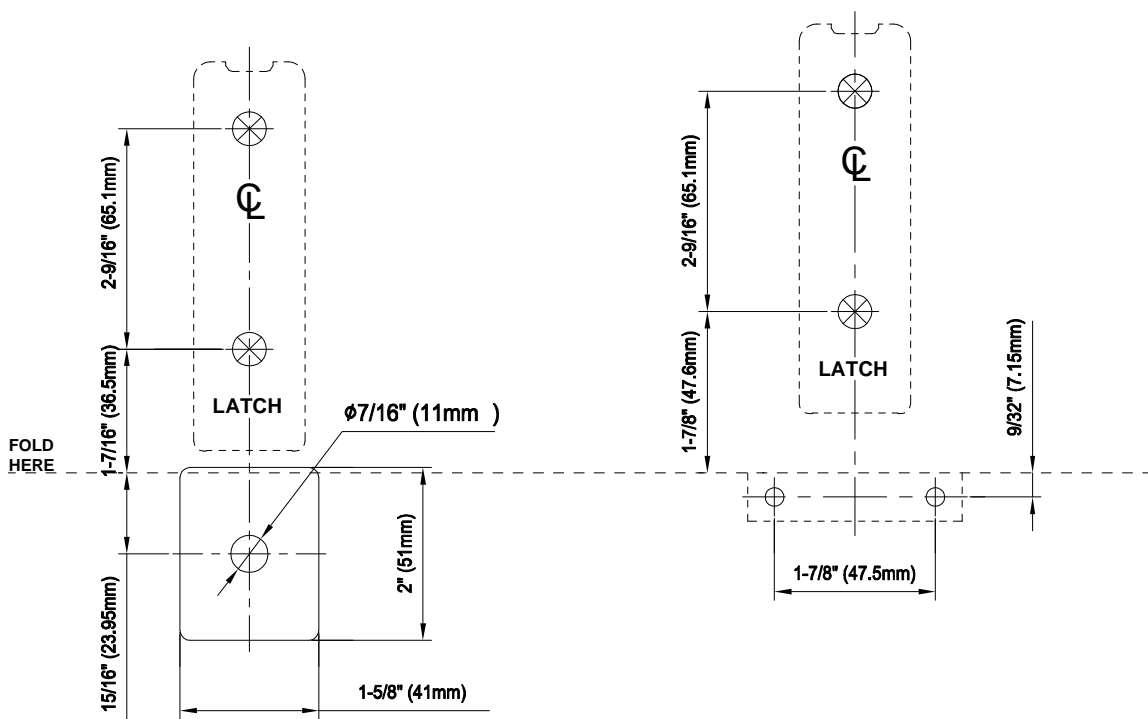
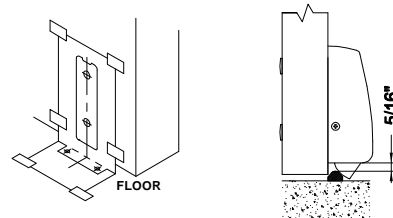



Illustration	Applications	Dimension	
		Metal	Wood
○	Strike Screw	#25 Drill #10-24 Tap	1/8" (3mm) Drill Pilot 1" Deep
⊗	Sex Bolt	5/16" (8mm) Drill (Device Side) 13/32" (10.3mm) Drill (Outside)	

PD9200V Series Service Manual

Templates

Preparation of Bottom Latch for SVR/3PT

Bottom Latch & 225 Strike

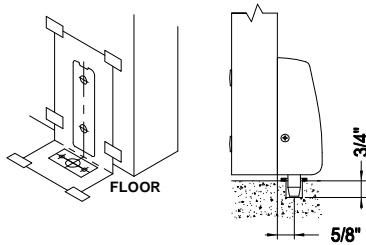

Bottom Latch & 226 Strike

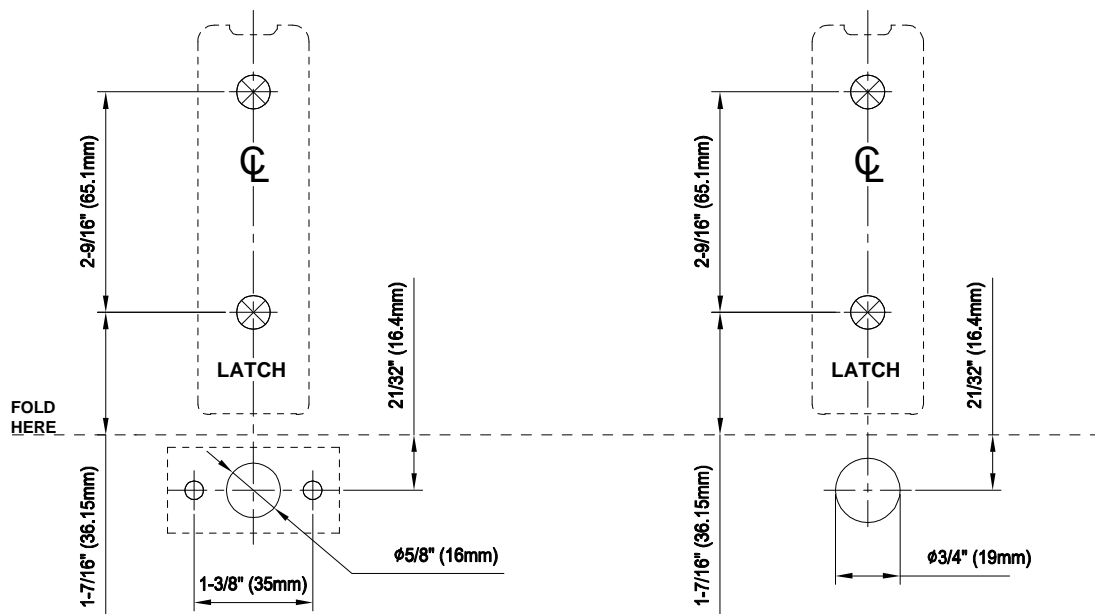
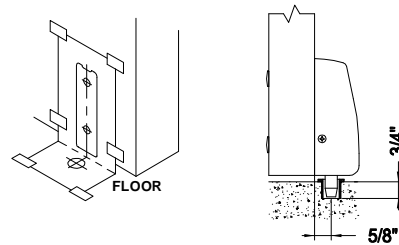


Illustration	Applications	Dimension	
		Metal	Wood
○	Strike Screw	#25 Drill #10-24 Tap	1/8" (3mm) Drill Pilot 1" Deep
⊗	Sex Bolt	5/16" (8mm) Drill (Device Side) 13/32" (10.3mm) Drill (Outside)	