


TEMPLATE FOR INSTALLING

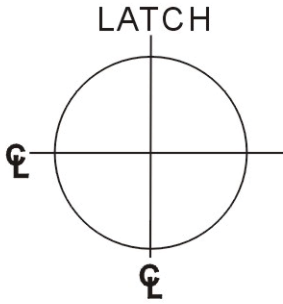

MARK CENTER OF DOOR THICKNESS FOR 1" DIA HOLE


DETACH HERE

HIGH BEVEL
LOW BEVEL
FLAT NO BEVEL
HIGH BEVEL
LOW BEVEL

MARK CENTER FOR 3/8" HOLES
NOTE:
Do not drill these holes for non thru bolt installation.

MARK CENTER FOR 2 1/8" HOLE

Notch for metal door only



LATCH

- IMPORTANT
1. FOR HIGHSIDE OF BEVEL PLACE OUTSIDE LINE AT EDGE OF DOOR
 2. FOR FLAT DOORS PLACE CENTER LINE AT EDGE OF DOOR
 3. FOR LOWSIDE OF BEVEL PLACE INSIDE LINE AT EDGE OF DOOR

2 3/4"

5/32"

