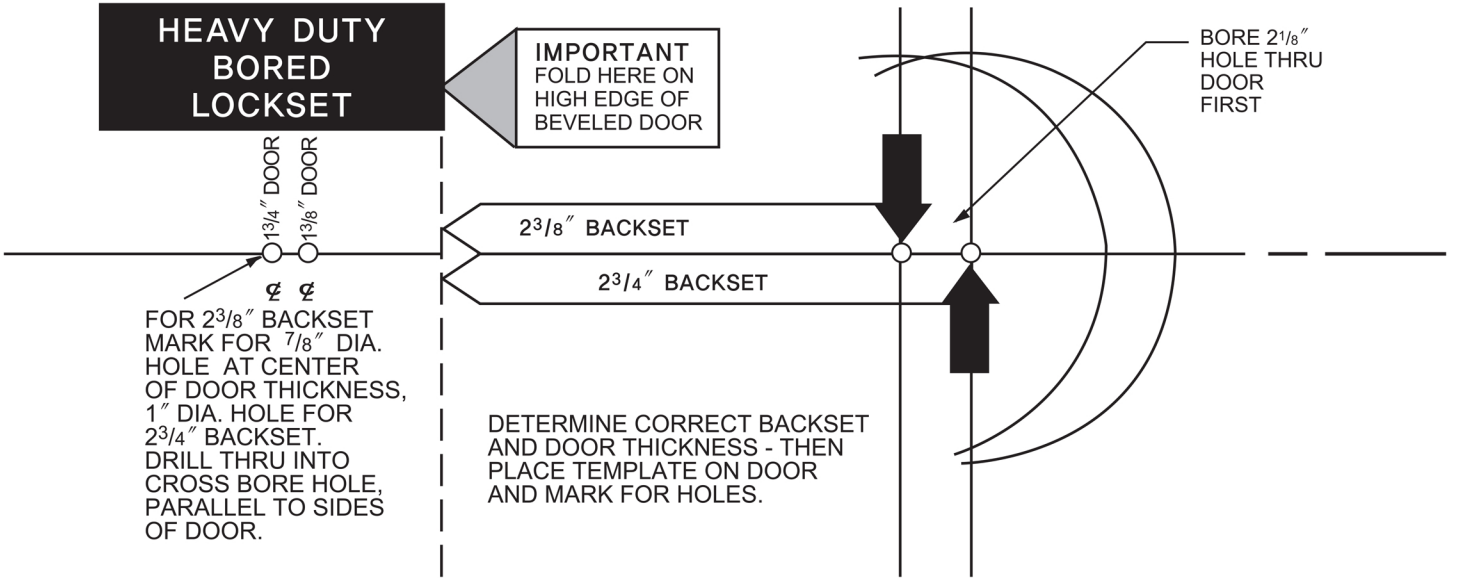
HEAVY DUTY BORED LOCKSET
IMPORTANT
FOLD HERE ON HIGH EDGE OF BEVELED DOOR
BORE 2 1/8″ HOLE THRU DOOR FIRST
1 3/4″ DOOR
1 3/8″ DOOR
2 3/8″ BACKSET
2 3/4″ BACKSET
FOR 2 3/8″ BACKSET MARK FOR 7/8″ DIA. HOLE AT CENTER OF DOOR THICKNESS, 1″ DIA. HOLE FOR 2 3/4″ BACKSET. DRILL THRU INTO CROSS BORE HOLE, PARALLEL TO SIDES OF DOOR.
DETERMINE CORRECT BACKSET AND DOOR THICKNESS - THEN PLACE TEMPLATE ON DOOR AND MARK FOR HOLES.